

# interbois

Interior finishing. Elevated.

8565

## Hexo Installation guide



Includes:  
**4 pieces per box**

Dimensions:  
**3/4" x 6" x 15"**

Coverage per box:  
**square pattern: 3,28 sq ft**  
**vertical pattern: 2,5 sq ft**  
**X pattern: 3,44 sq ft**

Specie:  
**white primed MDF**

Installation:  
**interior only**



### Materials required

- Masking tape
- Level
- Chalk line
- Mitre saw
- PL construction glue
- Glue gun
- Finishing nailer
- 18 gauge finishing nails
- Filler



### Recommendations and warnings

- ▶ Allow the material to acclimatize flat to its new environment for 48 to 72 hours before installation. Do not store Hexo patterns for long periods of time in an unheated basement or garage.
- ▶ When purchasing your material, allow about 10% for waste (if cutting is necessary).
- ▶ 5% imperfection is considered acceptable for each package. This percentage does not include cutting waste.



### Preparing the work environment

- ▶ Check the condition of the work surface before starting any installation procedure for Hexo patterns.
- ▶ that could interfere with installation, and level off the surface by correcting any unevenness as necessary.




## Before you start

- Make sure you have good lighting.
- First, draw up a clear, detailed plan to ensure installation is accurate and consistent and make sure you have sufficient materials for the entire project.
- Inspect all pieces thoroughly before installation.
- If you have any doubts about the product, its workmanship or its finish and can't place it in a less conspicuous area or eliminate imperfections, don't install it. Once the product has been installed, it is considered accepted by the installer and/or owner even if the owner is absent at the time of installation.
- Make sure the product you purchase is suitable for the desired installation.

## Installation steps\*


Installing Hexo patterns should be the last step in any construction or renovation project.

\* The installation steps are the same for square, vertical or X-shaped designs as shown.

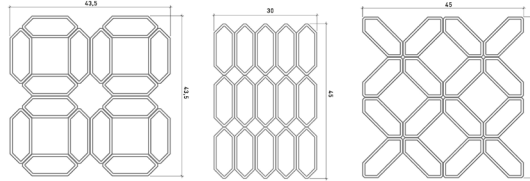


### Step 1

Determine the centre point of the Hexo pattern on your wall or ceiling. To do this, use a chalk line to draw a horizontal line and a vertical line to form a cross.

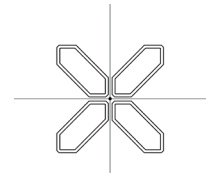


### Step 2

Apply a bead of PL glue to the back of the first pattern. Place it on the surface, making sure it's level with the lines you've drawn and the design you've chosen. Secure it permanently with finishing nails.




### Step 3

Take another glue-coated Hexo pattern and press it against the first one, repeating Step 2. Repeat for the other two patterns.

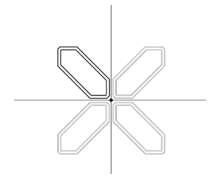


### Step 4

Once the four Hexo patterns have been positioned, repeat the above steps to create the desired quantity.

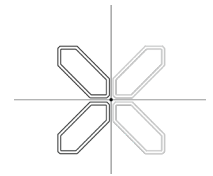

### Step 5

Camouflage holes with filler, let dry, sand lightly, and apply finishing paint.

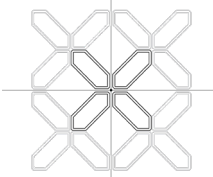

For full product warranty details, including all specifications and warnings, go to [interbois.ca](http://interbois.ca)

