

Stix Slats

Installation guide



Includes:
4 peel and stick slats and 2 spacers per pack

Dimensions:
3/8" x 1-3/8" x 8'

Coverage:
5,25 sq ft per pack

Specie:
MDF with white oak veneer

Installation:
interior only



Materials required

- Erasable pencil or masking tape
- Level
- Spacer



Recommendations and warnings

- ▶ Allow the material to acclimatize flat to its new environment for 48 to 72 hours before installation. Do not store slats for long periods of time in an unheated basement or garage.
- ▶ When purchasing your material, allow about 10% for waste (if cutting is necessary).
- ▶ 5% imperfection is considered acceptable for each package. This percentage does not include cutting waste.
- ▶ The slats must be stored in a dry, temperate location, between 15°C and 22°C, for a conditioning period of at least 48 hours, and kept away from heat, direct sunlight, or UV rays.



Preparing the work environment

- ▶ Check the condition of the work surface before starting any installation procedure for Stix slats.
- ▶ Remove any remaining glue, nails or other materials that could interfere with installation, and level off the surface by correcting any unevenness as necessary.



Before you start

- ▶ Make sure you have good lighting.
- ▶ First, draw up a clear, detailed plan to ensure installation is accurate and consistent and make sure you have sufficient materials for the entire project.
- ▶ Inspect all slats thoroughly before installation.
- ▶ If you have any doubts about the product, its workmanship or its finish and can't place it in a less conspicuous area or eliminate imperfections, don't install it. Once the product has been installed, it is considered accepted by the installer and/or owner even if the owner is absent at the time of installation.
- ▶ Make sure the product you purchase is suitable for the desired installation.

Installation steps


Installing peel and stick slats should be the last step in any construction or renovation project. Paint the base of your wall in the desired colour before starting to install slats.

▶ Step 1

Measure the length of the wall or ceiling to determine the number of slats required, taking into account their width (1-3/8") and the recommended spacing between slats using the 5/8" spacer. Figure out the location of the first slat. Draw a line on the surface to guide you.


▶ Step 2

Remove the protective film from the first slat. Keep the adhesive side clean. Press the slat against the wall, starting from the line you've drawn. Make sure it's level before pressing all the way down. Stick it firmly.

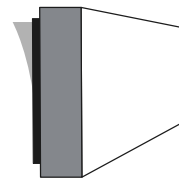

▶ Step 3

Using the spacing template provided under the packaging, determine the location of the second slat. Repeat Step 2.

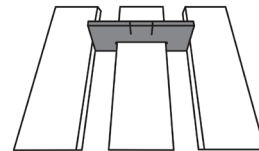

▶ Step 4

Repeat for all slats to be installed.

For full product warranty details, including all specifications and warnings, go to interbois.ca

